






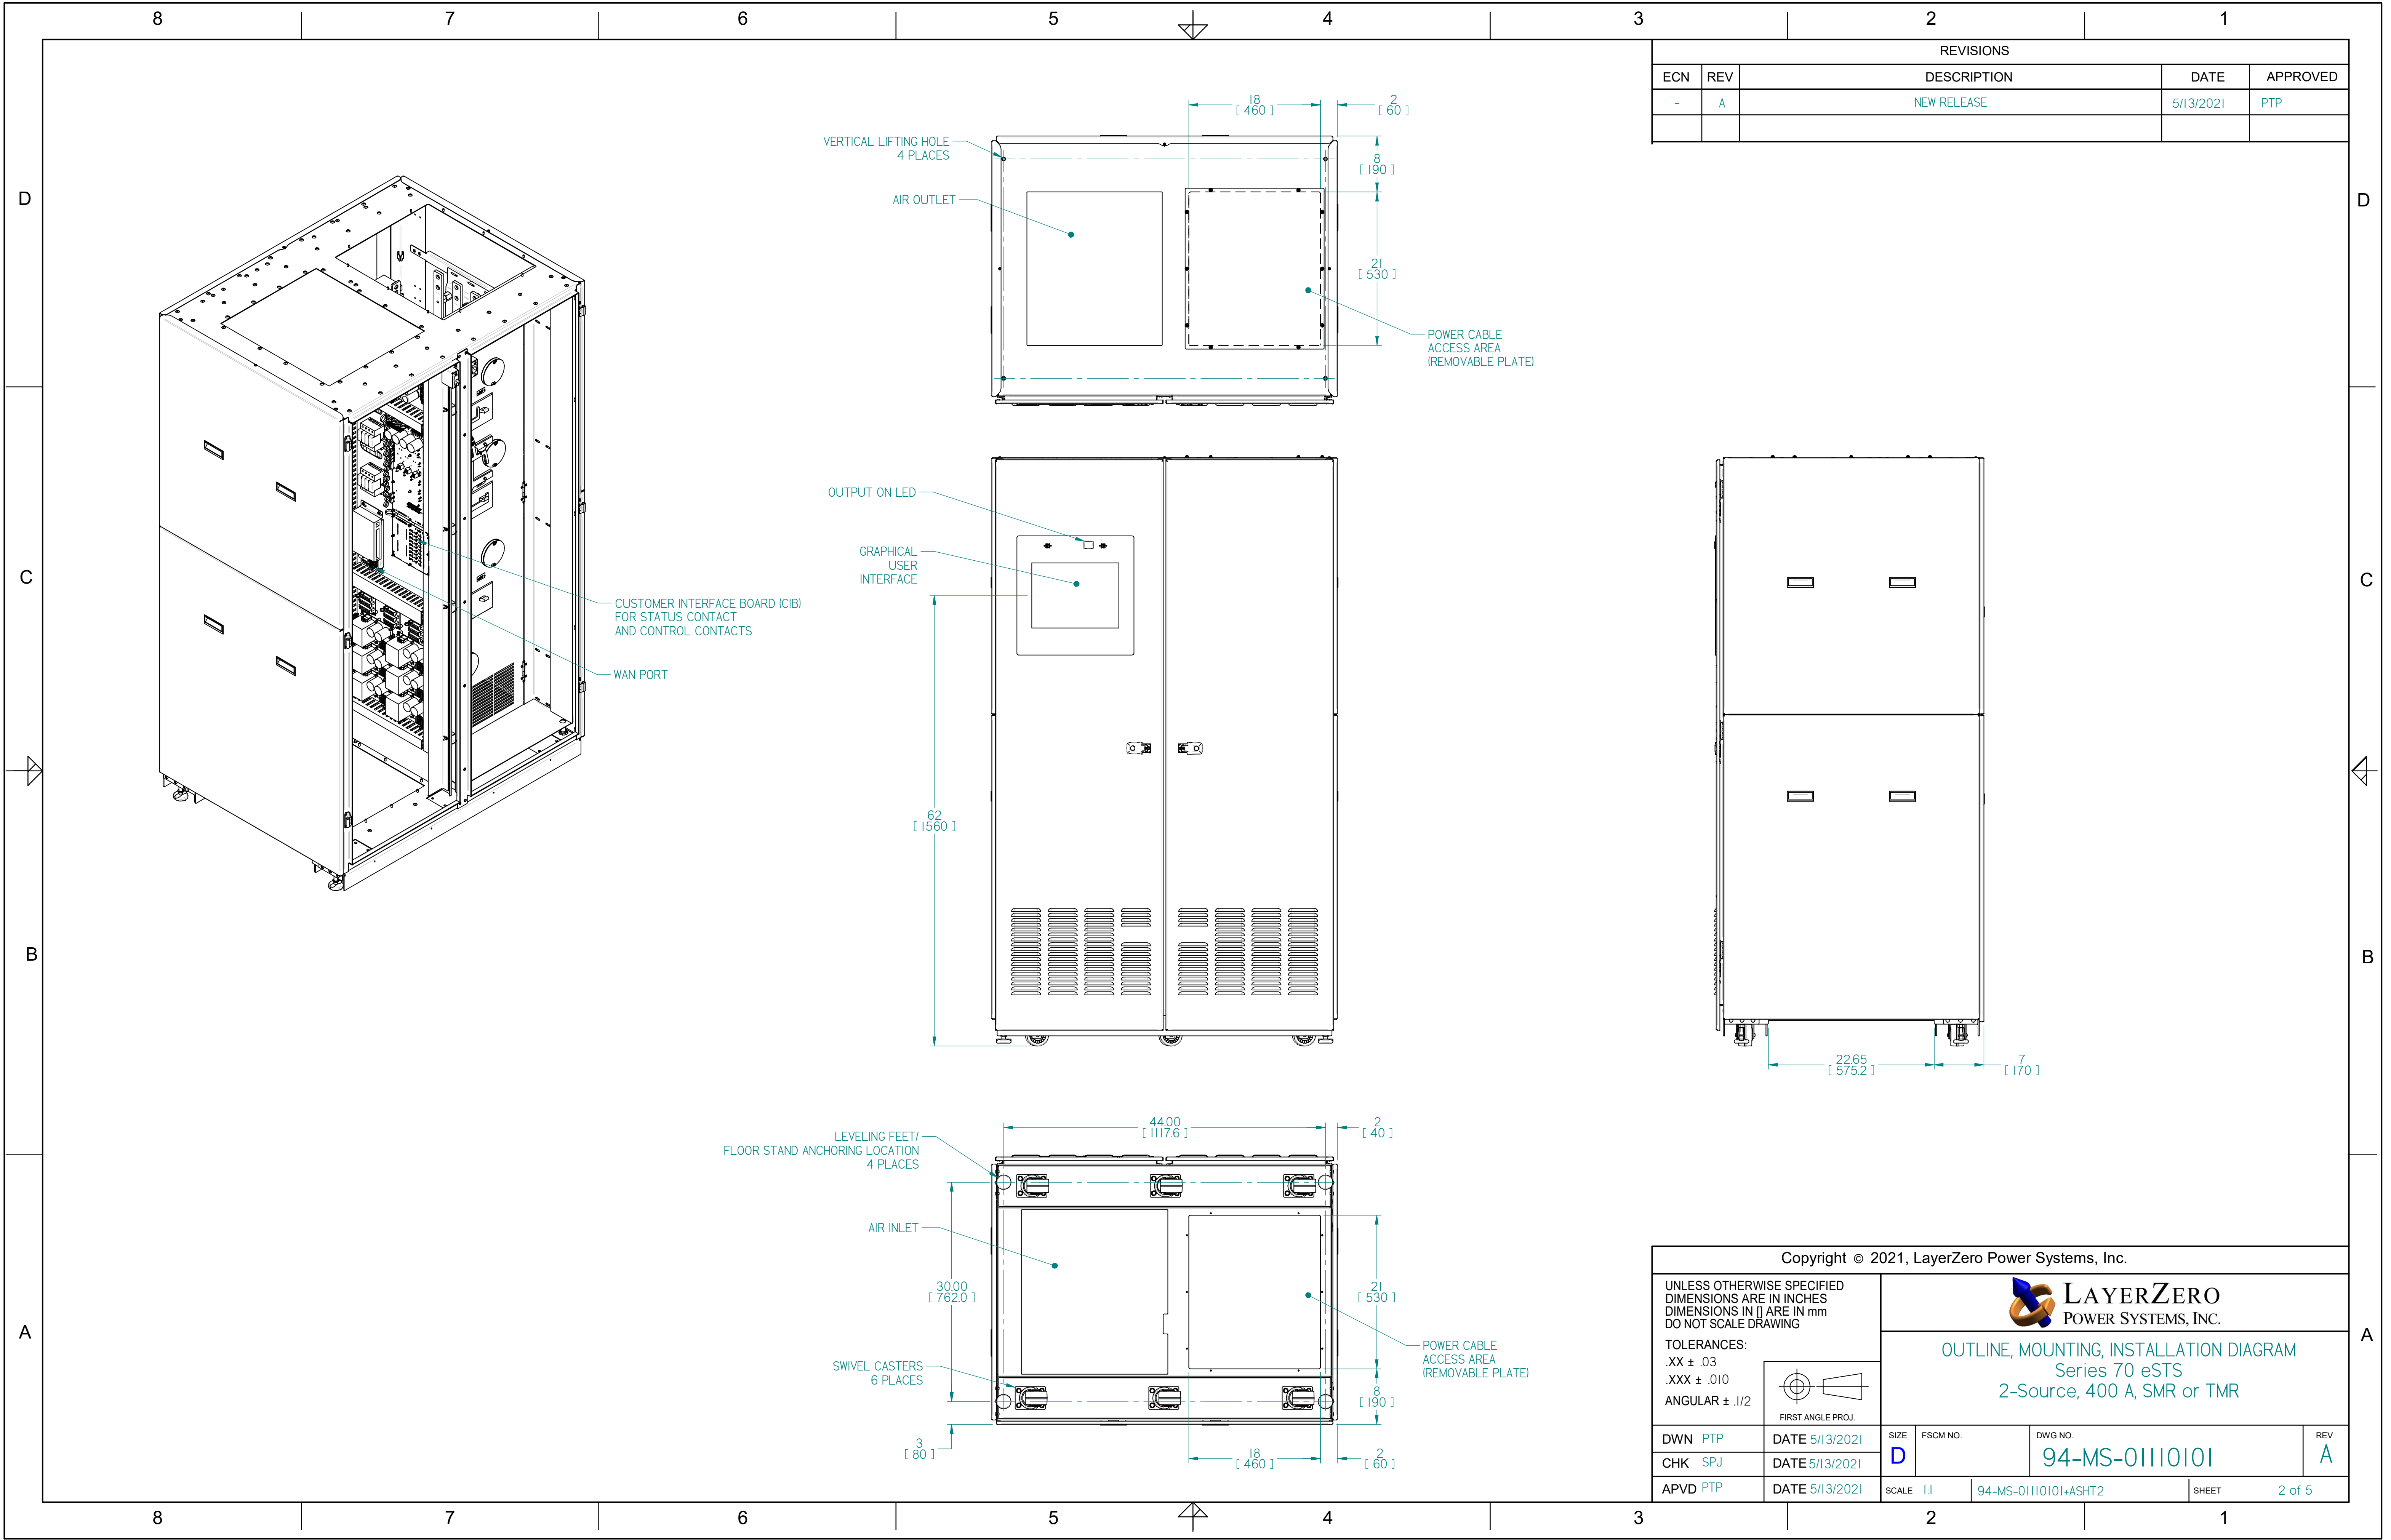


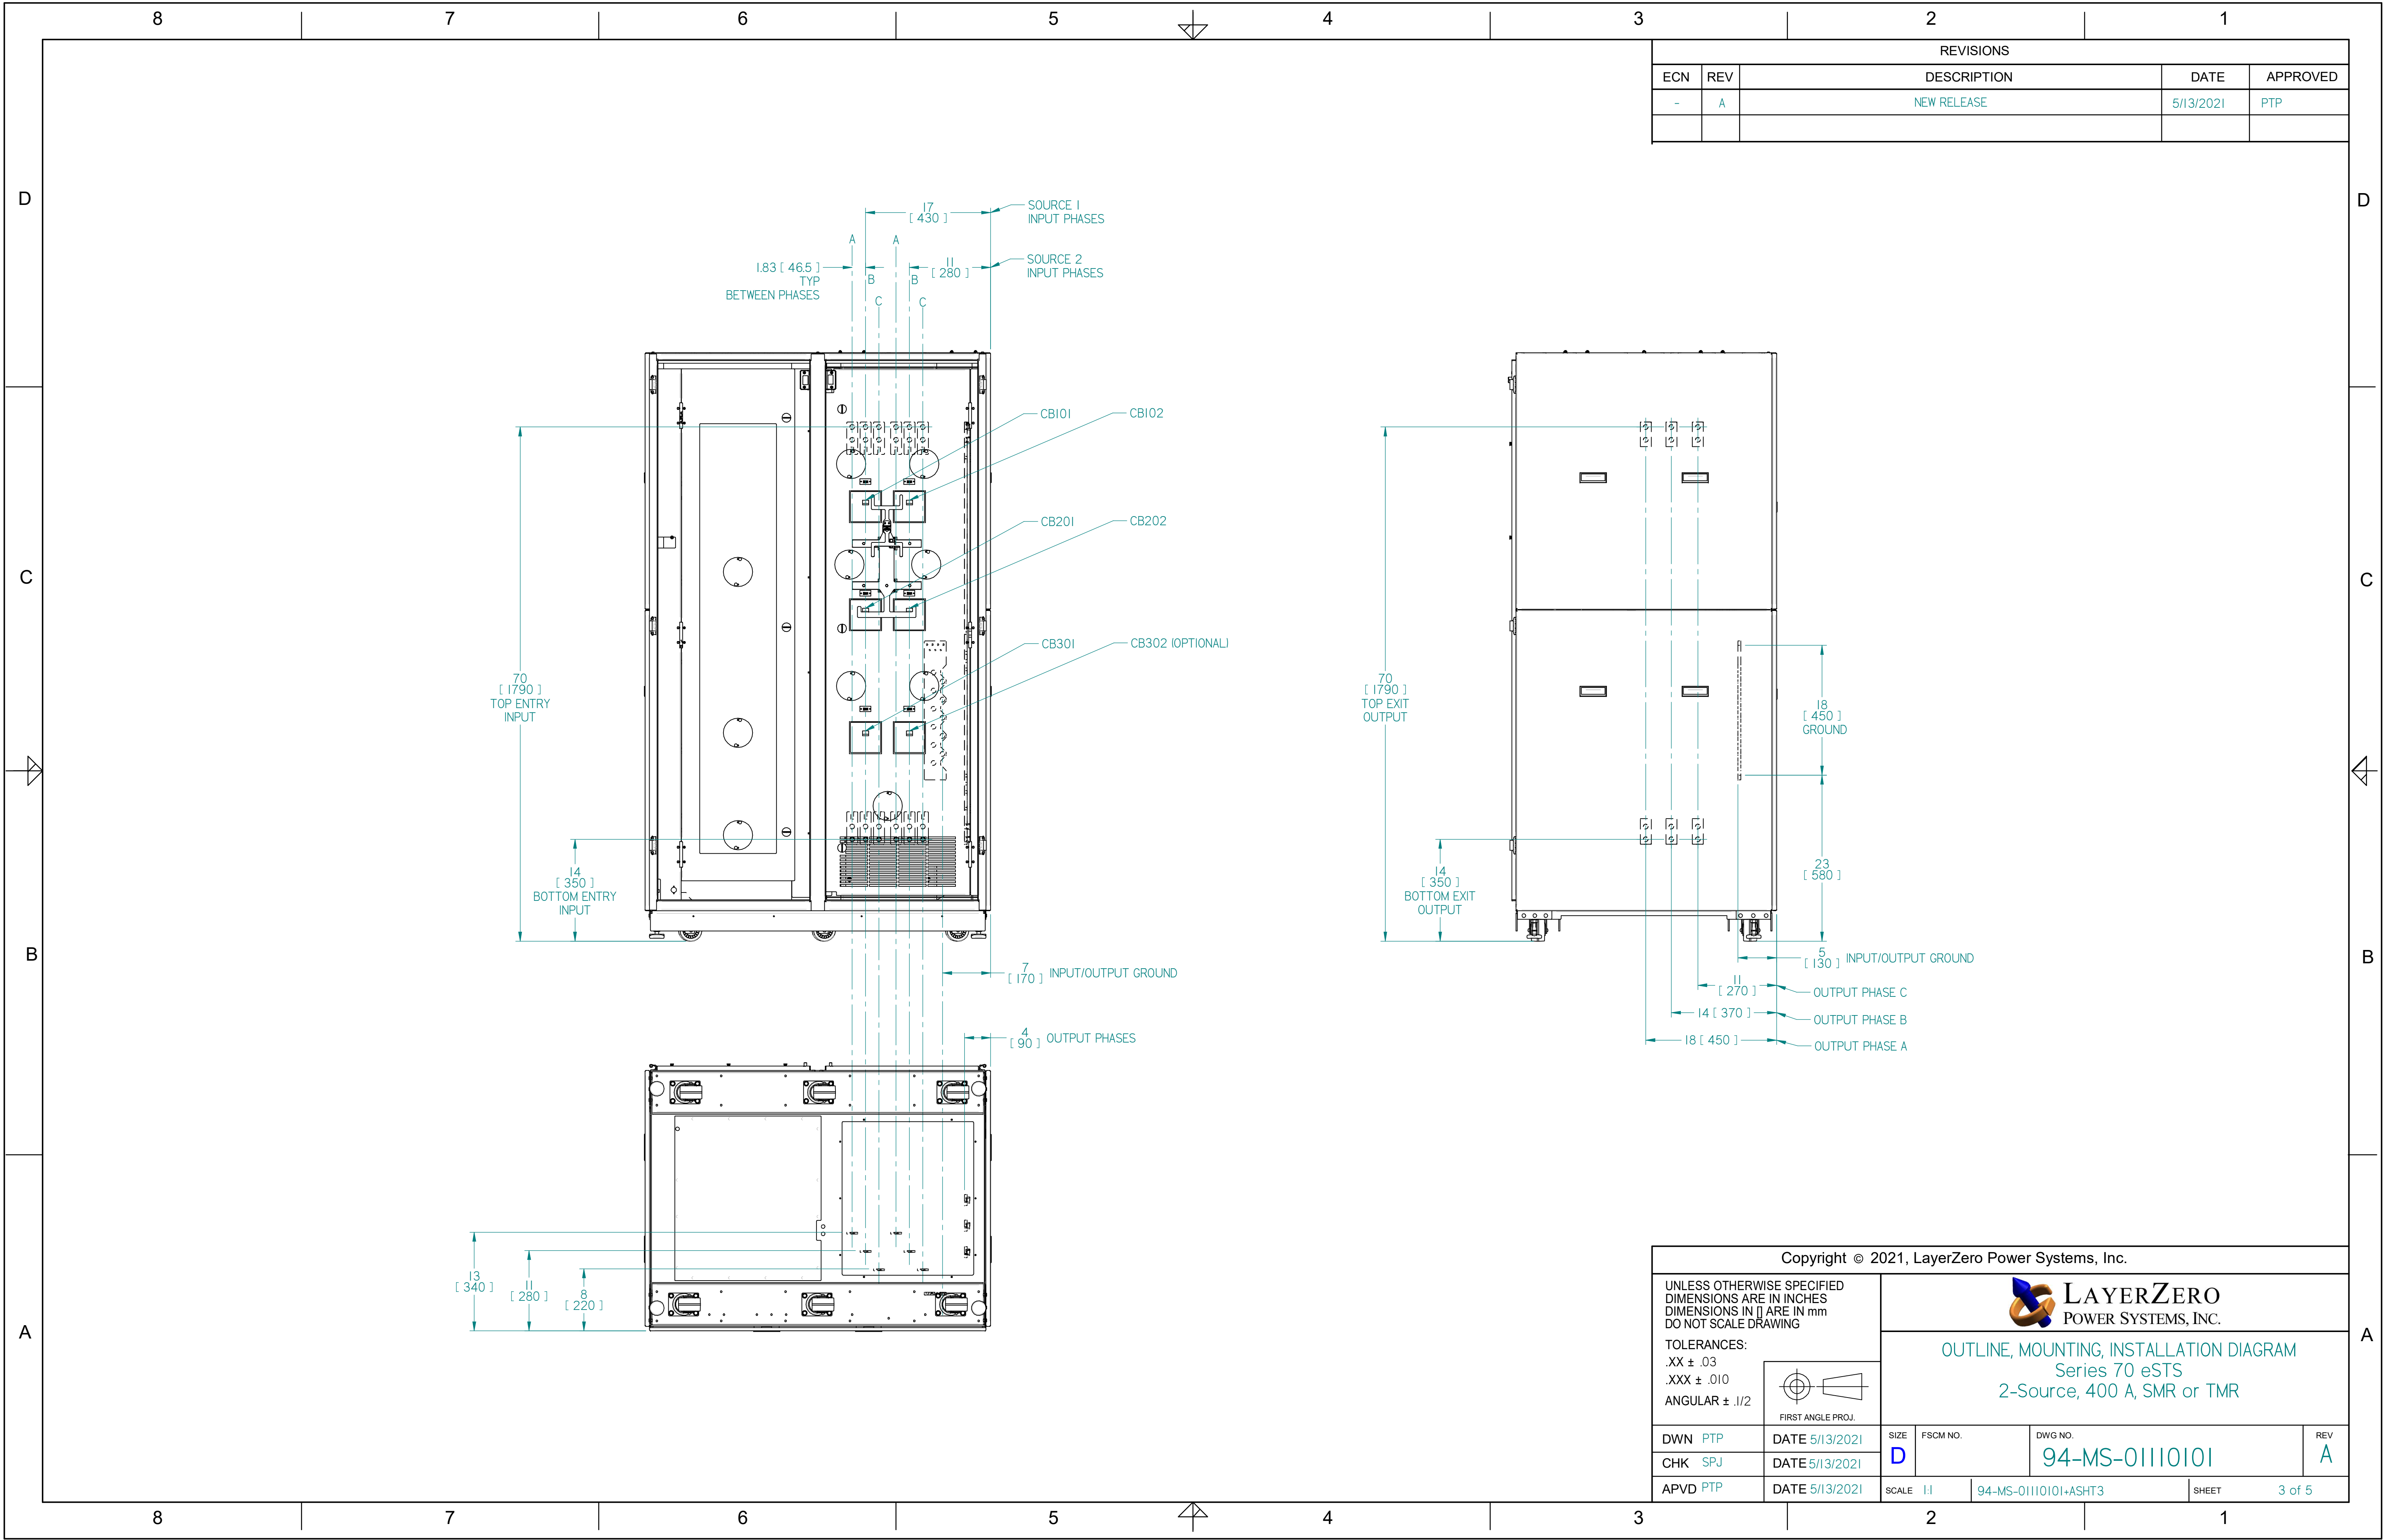

REVISIONS				
ECN	REV	DESCRIPTION	DATE	APPROVED
-	A	NEW RELEASE	5/13/2021	PTP

Copyright © 2021, LayerZero Power Systems, Inc.				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES DIMENSIONS IN [] ARE IN mm DO NOT SCALE DRAWING		 LAYERZERO POWER SYSTEMS, INC.		
TOLERANCES: .XX ± .03 .XXX ± .010 ANGULAR ± .1/2		OUTLINE, MOUNTING, INSTALLATION DIAGRAM Series 70 eSTS 2-Source, 400 A, SMR or TMR		
DWN PTP	DATE 5/13/2021	SIZE D	FSCM NO.	DWG NO. 94-MS-01110101
CHK SPJ	DATE 5/13/2021	SCALE 1:1	94-MS-01110101+ASHT3	REV A
APVD PTP	DATE 5/13/2021	SCALE 1:1	94-MS-01110101+ASHT3	SHEET 3 of 5

OPTIONAL JUNCTION BOX
P/N 42-00-40062310

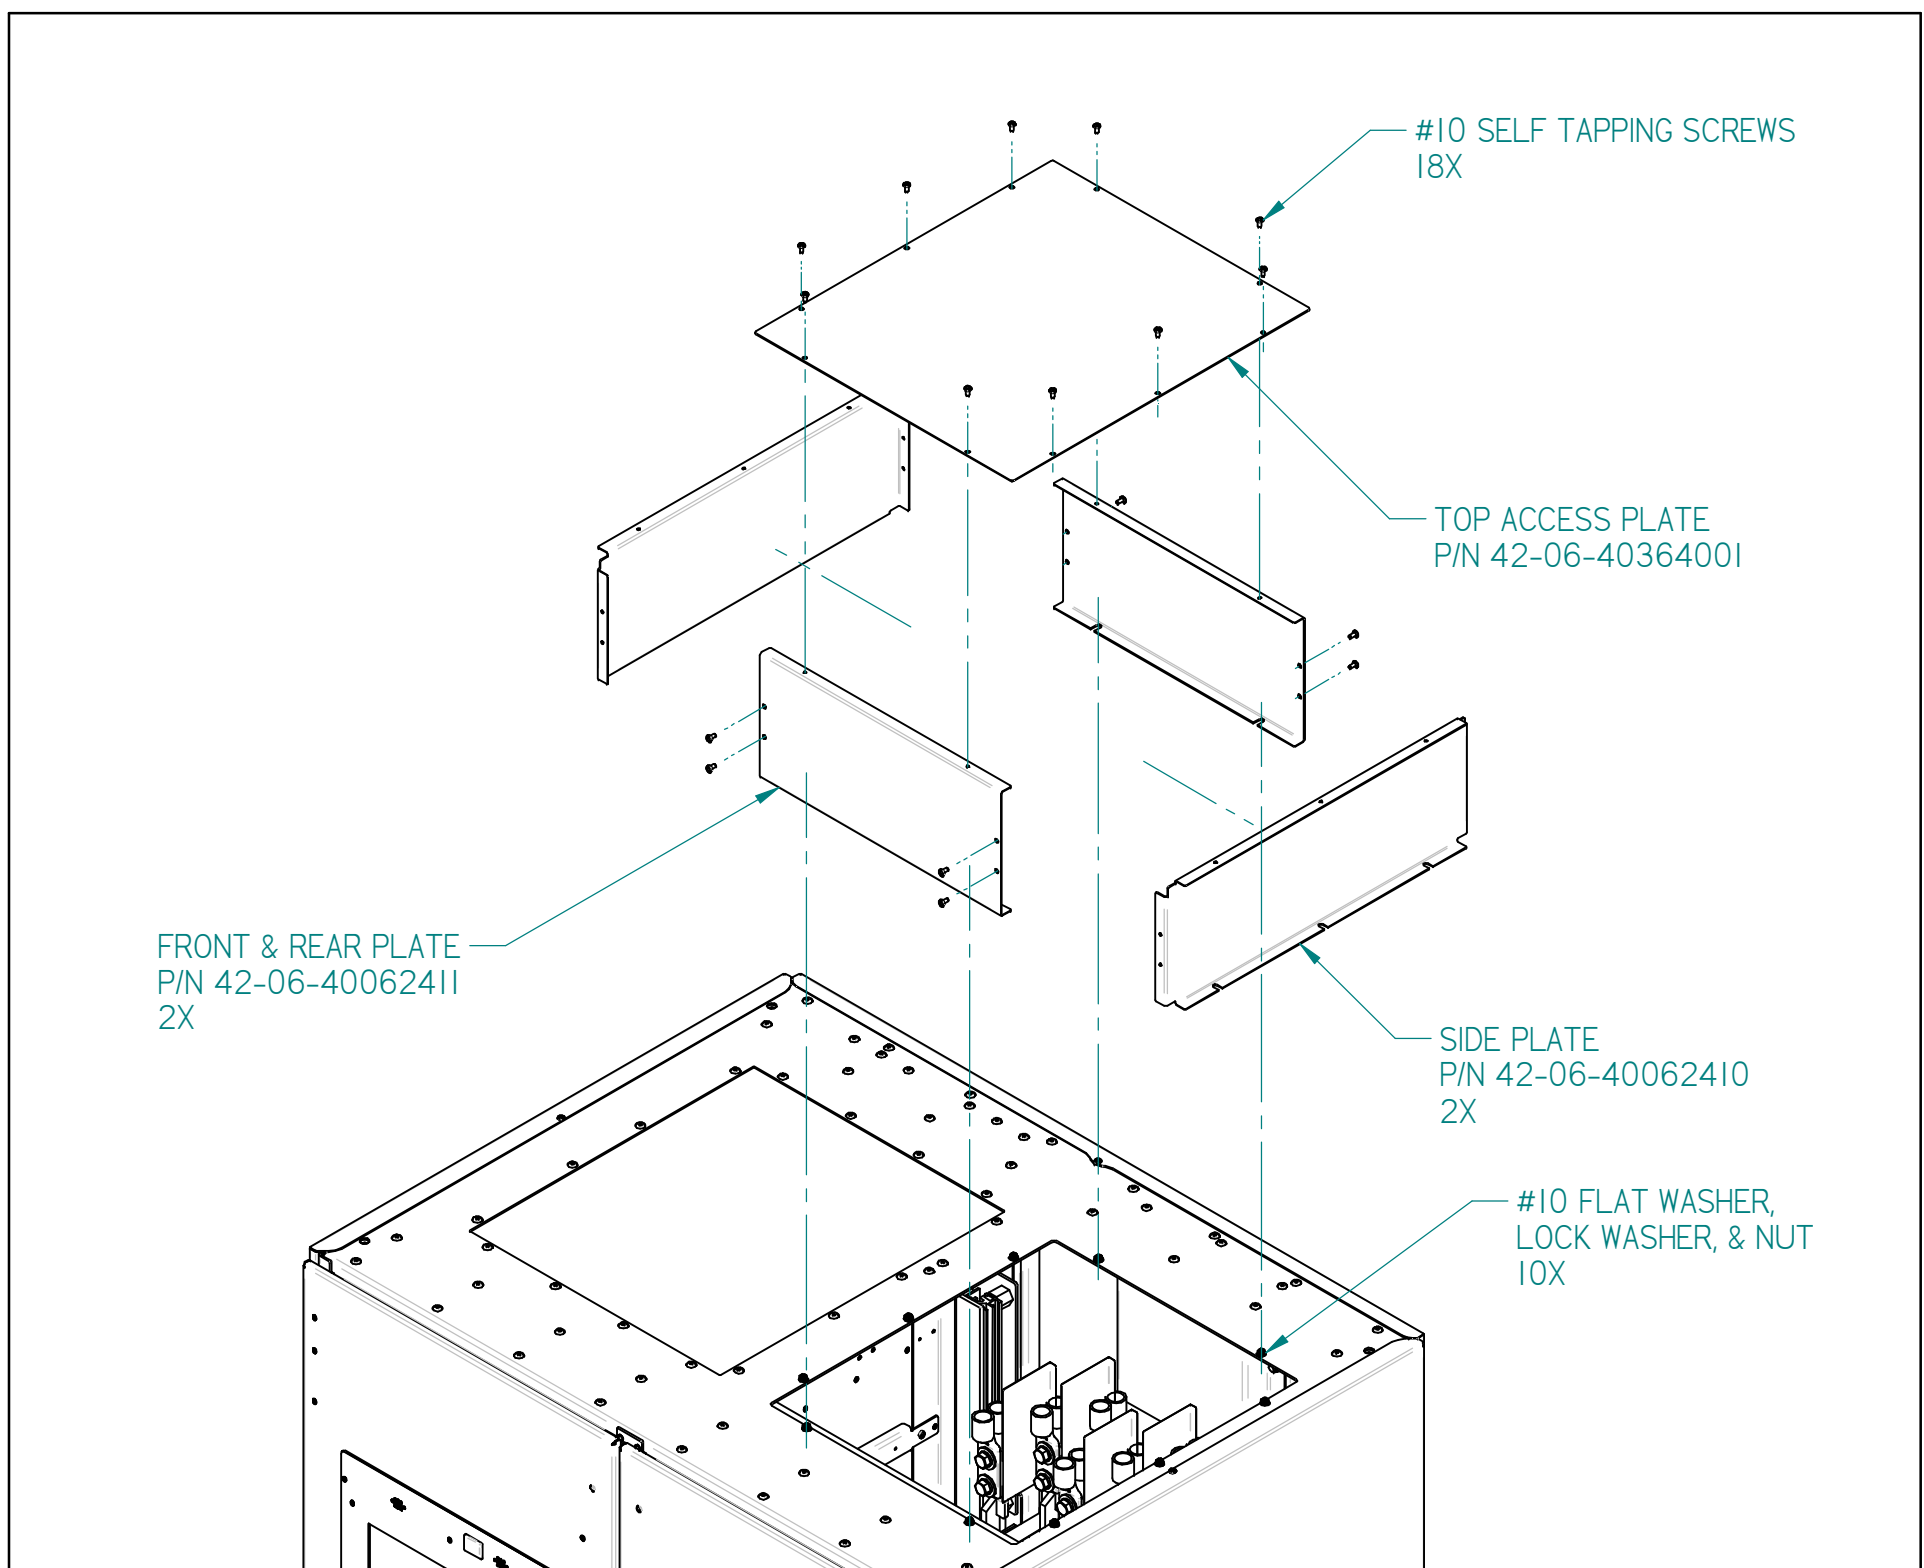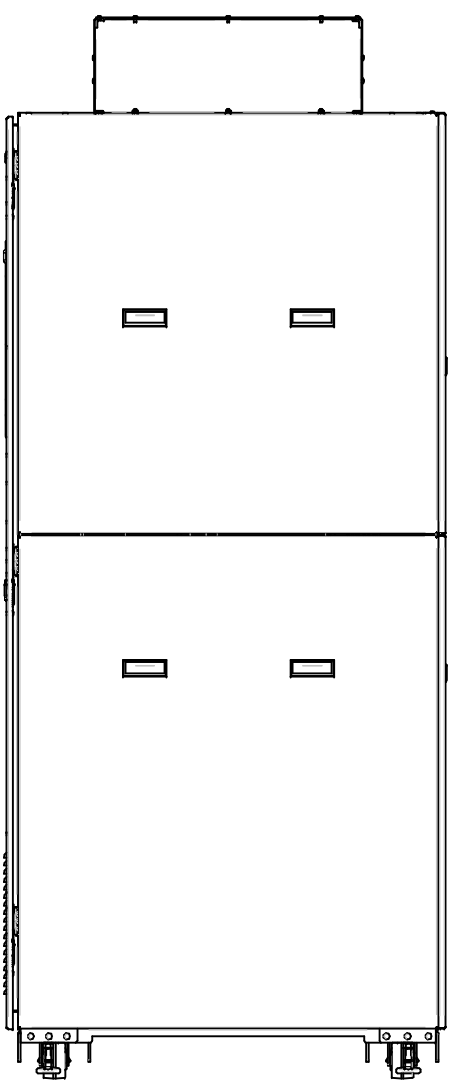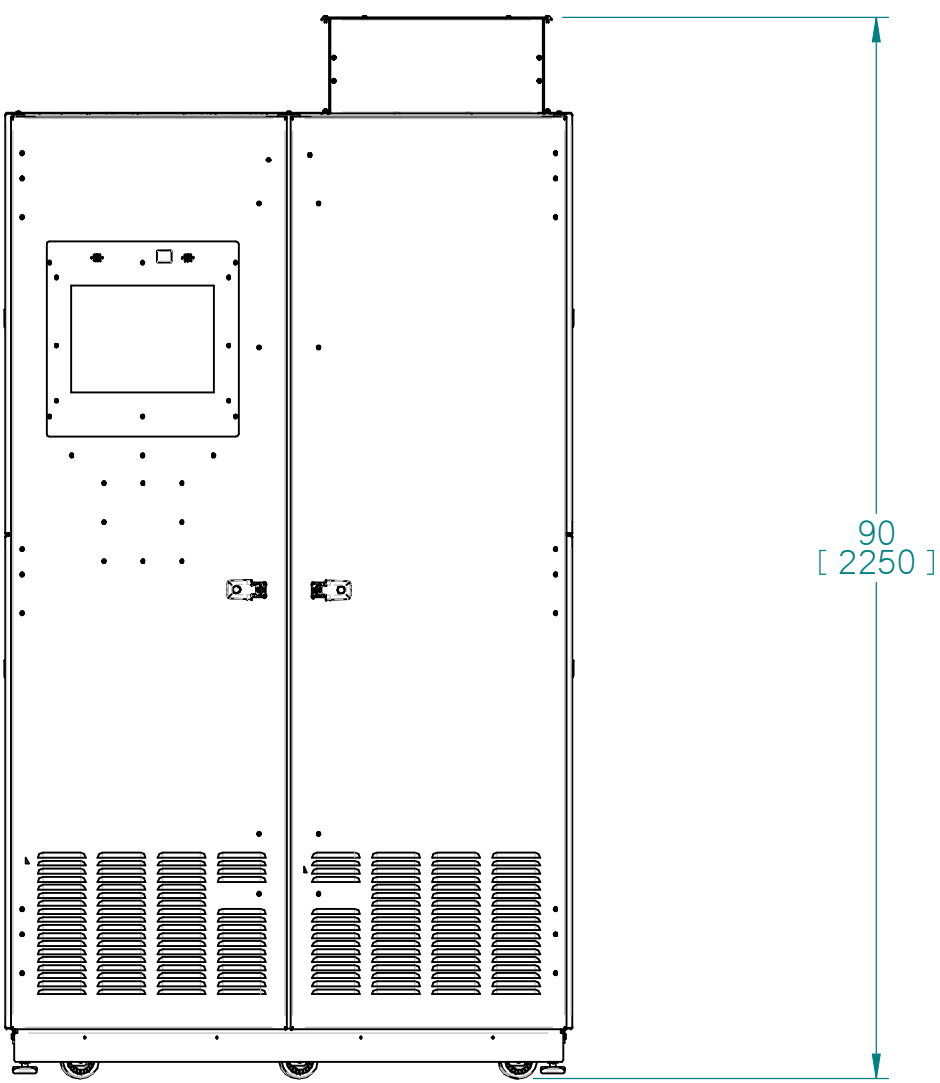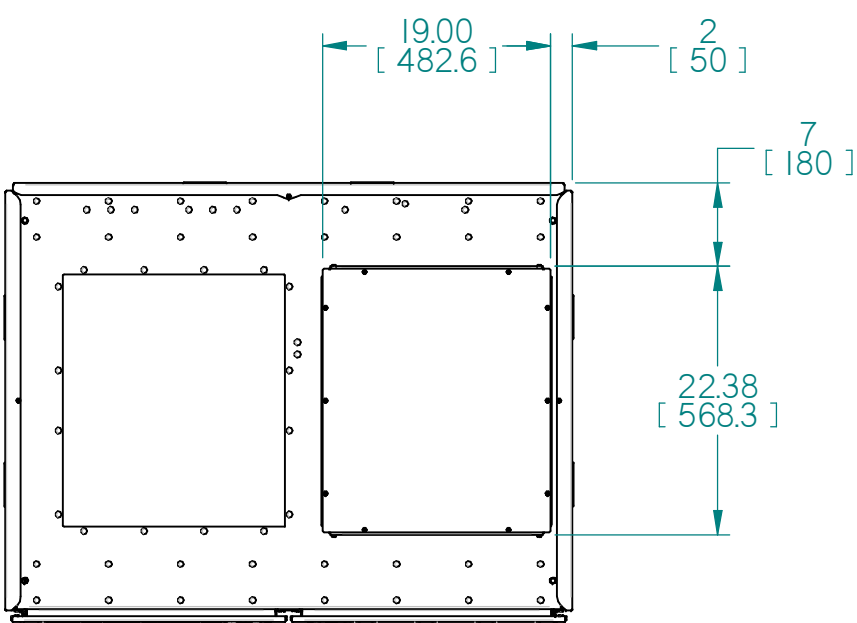

REVISIONS				
ECN	REV	DESCRIPTION	DATE	APPROVED
-	A	NEW RELEASE	5/13/2021	PTP

- NOTES:
1. TO INSTALL JUNCTION BOX, FIRST REMOVE TOP ACCESS PLATE, P/N 42-06-40364001 FROM THE CABINET. SET ASIDE #10 NUTS, LOCK WASHERS AND FLAT WASHERS.
 2. ASSEMBLE FRONT AND REAR PLATES, P/N 42-06-40062411, TO THE CABINET WITH #10 FLAT WASHER, LOCK WASHER AND NUT.
 3. ASSEMBLE SIDE PLATES, P/N 42-06-40062410, TO THE CABINET WITH #10 FLAT WASHER, LOCK WASHER AND NUT. ATTACH SIDE PLATES TO THE FRONT AND REAR PLATES WITH #10 SELF-TAPPING SCREWS.
 4. ASSEMBLE TOP ACCESS PLATE TO THE JUNCTION BOX ASSEMBLY WITH #10 SELF-TAPPING SCREWS.

Copyright © 2021, LayerZero Power Systems, Inc.

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
DIMENSIONS IN [] ARE IN mm
DO NOT SCALE DRAWING

TOLERANCES:
.XX ± .03
.XXX ± .010
ANGULAR ± .1/2

FIRST ANGLE PROJ.

POWER SYSTEMS, INC.

OUTLINE, MOUNTING, INSTALLATION DIAGRAM
Series 70 eSTS
2-Source, 400 A, SMR or TMR

DWN PTP	DATE 5/13/2021	SIZE	FSCM NO.	DWG NO.	REV
CHK SPJ	DATE 5/13/2021	D		94-MS-01110101	A
APVD PTP	DATE 5/13/2021	SCALE 1:1	94-MS-01110101-ASHT5	SHEET	5 of 5